

Handy type **Tofutty** Electric Dispenser

**PATENT
PENDING**

Tofutty

Electric dispenser 'Tofutty' was released at August 2016.

In general, the glue dispensing systems are equipped with air-compressor and power source code. But, our dispenser doesn't need to connect with these devices and parts. Also the size is so compact and the weight is so light. So, you are able to operate this dispenser anytime, anywhere you like. We promise our dispenser will improve on your works and reduce the costs considerably.

Features

Compact and Cordless body

- Easy movement in narrow space
- Small size (height 149mm , Width 22.5mm , depth 38mm)
- Light Weight (75g)

Precise and Easy operation

- $\Phi 8$ micro actuator technology of icomes makes it possible to apply low liquid of high viscosity materials in high precision.(the minimum unit : $0.1\mu\text{L} \sim$)

Range of liquid materials

- Adhesive, Epoxies, Screw lockings, Oils
※Viscosity (Under 20,000mPa·s)



**Now On
Sale!**

Product Price



Please feel free to ask us about price.

E-mail : asia-info@icomes.co.jp

Specification

| | Specification |
|-------------------|--|
| Size | H: 149mm , W: 22.5mm , D: 38mm |
| Weight | 75g |
| Capacity | 1,000 μ L(1cc) |
| Power | AAA battery (Ni-MH) (Specify : Panasonic rechargeable battery EVOLTA) |
| Syringe nozzle | General-purpose needles are available (Recommendation : Musashi Engineering taper nozzle 22G) |
| Viscosity | Under 20,000mPa·s |
| Repeatability(CV) | Coefficient of variation:10%(1 μ L) |
| Syringe | Clear syringe (Material:Polypropylene) UV block syringe (Material:Polypropylene) |

Accuracy of liquid discharge

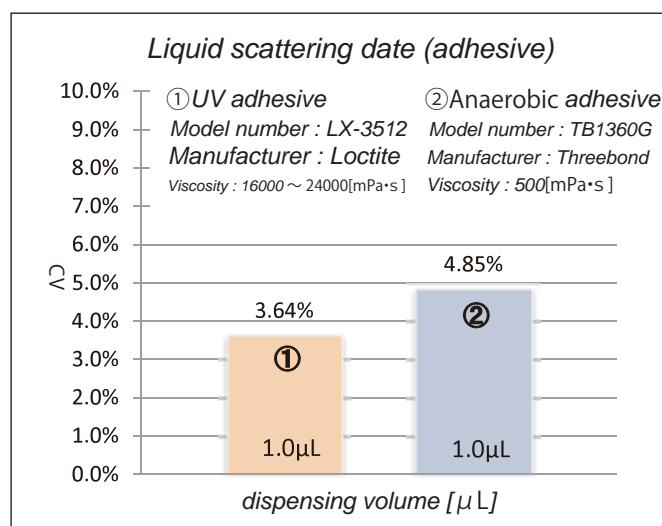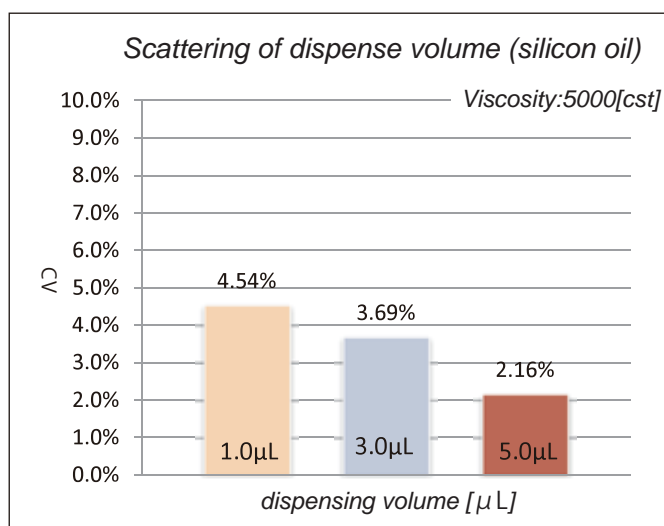


Option

Wireless communication



Wireless communication automatically record date time and dispense volume.

Foot switch

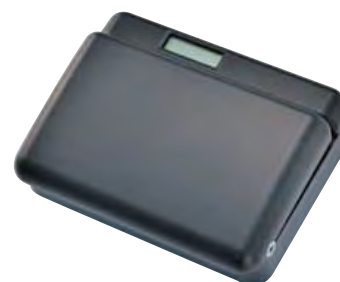

Foot switch prevents hand's shaking control at the time the button is pushed.

 **Icomes Lab Co., Ltd.**

Location : Kitaiioka 1-8-25, Morioka-shi,
Iwate 020-0857, Japan

TEL : +81-19-601-8228 FAX : +81-19-601-8227

E-mail : asia-info@icomes.co.jp

URL : <http://www.icomes.co.jp/en/>